LAVATHERM 56740

User manual
Notice d'utilisation

Condenser dryer
Sèche-linge à condensation

Thank you for choosing one of our high-quality products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

Contents

Operating Instructions 3
Important safety information 3
Environment 5
Product description 6
Control panel 7
- Control panel 7
- Display 7

Before first use 8
Programme overview 8
Daily use 9
- Sorting laundry 9
- Average laundry weights 10
- Switching machine/drum light on 10
- Laundry loading 10
- Selecting the programme 11
- DELICATE function 11
- LONG ANTI-CREASE function 11
- BUZZER function 11
- TIME function 12
- DELAY START 12
- Child lock 12
- Starting the programme 12
- Changing programme 12
- Drying cycle complete / removing laundry 13

Care and cleaning 13
- Cleaning fluff filter 13
- Cleaning the door seal 15
- Emptying the condensate tank 15
- Cleaning heat exchanger 16
- Cleaning the drum 17
- Clean operating screen and housing 17

What to do if ... 17
Machine settings 19
Technical data 20
Installation 21
- Appliance positioning 21
- Removing transport safety packaging 21
- Electrical connection 21
- Changing door stop 22
- Special accessories 23

Service 23

Subject to change without notice

Operating Instructions

Important safety information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

- Please read the instruction book before using this appliance.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Make sure that small children and pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance

WARNING!

- **Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire!**
- **Lint must not be allowed to accumulate around the tumble dryer.**

- **Risk of electric shock!** Do not spray down the appliance with jets of water.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.
- **Caution - hot surface** : Do not touch the door light cover surface when the light is switched on.

  (Only dryers equipped with internal drum light)

Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children often do not recognise the hazards associated with electrical appliances. Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

Environment

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
  - Always keep the ventilation slots on the base of the dryer unobstructed;
  - Use the loading volumes specified in the programme overview;
  - Ensure you have good ventilation in the installation room;
  - Clean the micro-fine filter and fine strainer after each drying cycle;
  - Spin the laundry well before drying.

Energy consumption depends on spinning speed set in washing machine. Higher spinning speed - lower energy consumption.

Environmental information

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

WARNING!

When the unit is no longer being used:

- Pull the plug out of the socket.
- Cut off the cable and plug and dispose of them.
- Dispose of the door catch. This prevents children from trapping themselves inside and endangering their lives.

Product description

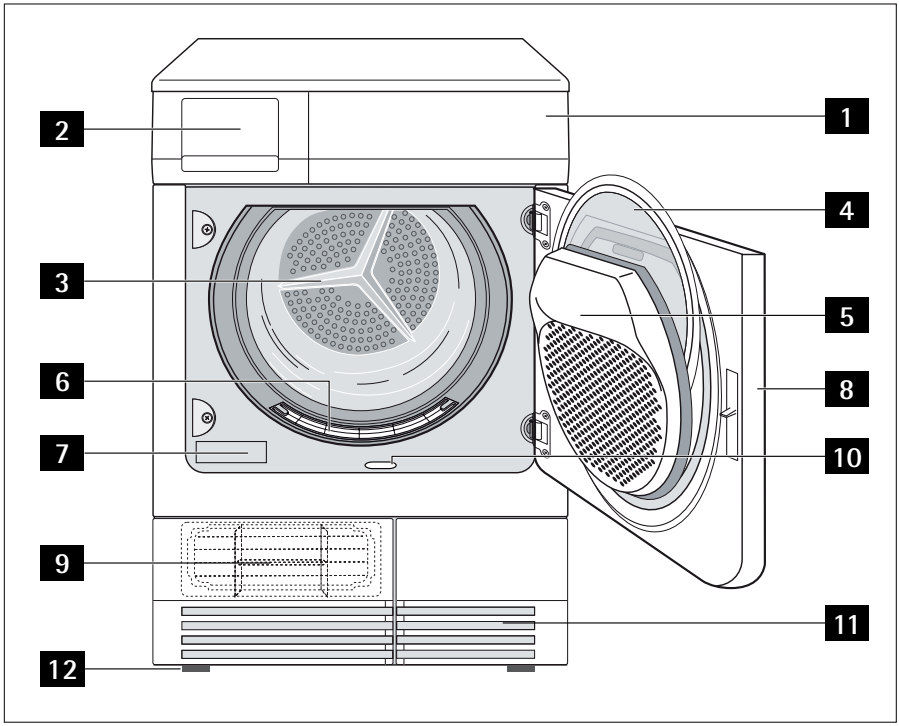

1 Control panel
2 Water reservoir
3 Drum light
4 Fine fluff filters
5 Course fluff filters
6 Fluff filters
7 Rating plate
8 Loading door (reversible)
9 Heat exchanger door
10 Button for opening door in plinth
11 Ventilation grille
12 Adjustable feet

Control panel

Control panel

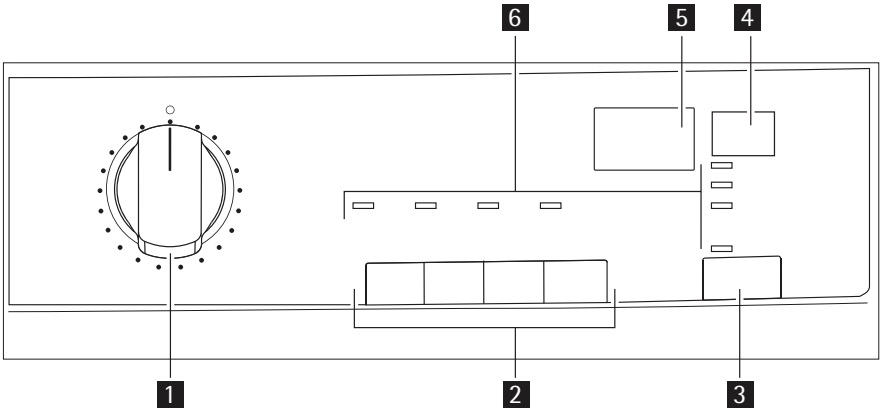

1 Programme selector and on/off switch
2 Function buttons
3 START PAUSE button
4 DELAY START button
5 Display
6 Status LED

Display

Display description		
-		
-	delay start	child lock
2.11	10-3.00	30'-20h
cycle duration	time program scope (10 min - 3h)	delay start scope

Before first use

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (ca. 30 min.) with damp cloths in the machine.

Programme overview

Programmes	max. load[1)]	Application/properties	Options	Care mark
		COTTONS		
EXTRA DRY	7 kg	Thorough drying of thick or multi- layered fabrics, e.g. terry towelling items, bathrobes.	all except TIME	
CUPBOARD DRY	7 kg	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	all except TIME	
IRON DRY	7 kg	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	all except TIME	
		EASY CARE		
EXTRA DRY	3 kg	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	all except TIME	
CUPBOARD DRY	3 kg	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	all except TIME	
IRON DRY	3 kg	For thin fabrics which are also to be ironed, e.g. knitwear, shirts.	all except TIME	
		special		
TIME PROGRAMME	7 kg	For drying of individual items of laundry.	all	
FRESHEN-UP	1 kg	For refreshing textiles that have been in storage.	all except TIME	
BED LINEN	3 kg	Bed linen (single and double sheet, pillowcase, bedspread, duvet cover).	all except TIME	
JEANS	7 kg	For leisure clothing, such as jeans, sweatshirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	all except TIME	
SPORTS LIGHT	2 kg	For sportswear, thin fabrics, polyester, which are not ironed.	all [2)] except TIME	

Programmes	max. load[1)]	Application/properties	Options	Care mark
EASY IRON PLUS	1 kg (or 5 shirts)	Special program with anti-crease mechanism for easy care fabrics such shirts and blouses; for minimum ironing effort. The results depend on the type of fabric and its finish. Place fabrics in the dryer straight after spinning; once dried, immediately remove fabrics and place on a clothes hanger.	all[2)] except TIME	
WOOL CARE	1 kg	Special programme for briefly treating woollens with warm air, after they have been dried naturally, worn or stored for long periods. Wool fibres stand up and the wool becomes soft and cosy. Recommendation: remove fabrics immediately after drying.	DELICATE BUZZER, DELAY START	

1) maximal weight of dry clothes
2) DELICATE set as default

Daily use

Sorting laundry

- Sort by fabric type:
  - Cotton/linen for programmes in COTTONS programme group.
  - Mixtures and synthetics for programmes in SYNTHETICS programme group.
- Sort by care label: The care labels mean:

	Drying in the tumble dryer possible in principle
	Drying at normal temperature
	Drying at reduced temperature
	Drying in the tumble dryer **not** possible

Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying.
This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the EXTRA programme. Items may shrink!
- Wool and wool-like textiles can be dried using the WOOL CARE programme.

Preparing laundry

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Do not overload the appliance. Observe max. loading volume of **7** kg.

Average laundry weights

bathrobe	1200 g
quilt cover	700 g
man's work shirt	600 g
man's pyjamas	500 g
sheet	500 g
tablecloth	250 g
man's shirt	200 g
night dress	200 g
pillow case	200 g
towelling towel	200 g
blouse	100 g
ladies' briefs	100 g
men's underpants	100 g
napkin	100 g
tea cloth	100 g

Switching machine/drum light on

Turn the programme selector to any programme or turn it to DRUM LIGHT. The machine has been switched on. When the loading door is opened, the drum light is illuminated.

Laundry loading

1. Open loading door:

   Use force to push against the loading door (push point)
2. Load your laundry (do not force it in).

CAUTION!
Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

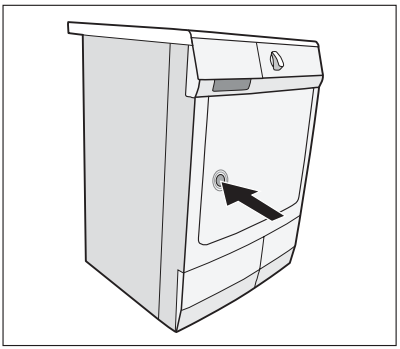

Selecting the programme

Use the programme selector to set the programme you require. The estimated time to end of the programme appears in the LCD in h:mm format (hours:minutes).
During the cycle time elapses by steps of one minute; less than 1 hour the leading zeros are not shown (ex. “59”, “5”, “0”).

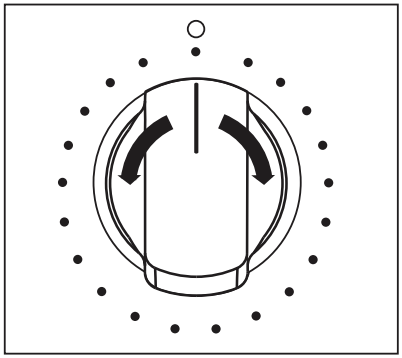

DELICATE function

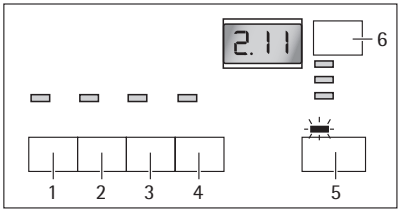

For especially gentle drying of sensitive fabrics with the ⊙ care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.
Delicate function is only suitable for use with loads of up to 3kg.
To activate it:

1. Choose the drying programme.
2. Press DELICATE button (1) - the LED above is on.

To deselect function press again DELICATE button (1). The LED above is off.

LONG ANTI-CREASE function

This function prolongs anti-crease phase what gives 90 min. in total. The drum rotates in intervals during this phase. The laundry thereby remains relaxed and free of creases.
To activate it:

1. Choose the drying programme.
2. Press LONG ANTI-CREASE button (2) - the LED above is on.

To deselect function press again LONG ANTI-CREASE button (2). The LED above is off.
If this additional function is selected, the anti-crease phase at the end of the drying cycle is lengthened by 60 minutes. The laundry can be removed at any time during the anti-crease phase.

BUZZER function

The appliance is supplied with the BUZZER function deactivated.
The buzzer sounds or plays a tune when activated during:

- cycle end
- anti-crease phase and when phase starts or ends
- cycle interruption by a warning
- alarm

To activate it:

1. Choose the drying programme.
2. Press BUZZER button (3) - the LED above is on.

To deselect function press again BUZZER button (3). The LED above is off.

TIME function

To select the programme duration after setting the TIME PROGRAMME . You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.

1. Turn the programme knob to the TIME PROGRAMME. The blinking 10' appears in the display. (corresponding to the cooling phase).
2. Press the TIME button (4) repeatedly until the desired programme duration is shown in the display, e.g. 20 for a programme of 20 minutes.

If the programme duration is not selected, the duration is automatically set to 10 mins.

DELAY START

With the DELAY START button (6), you can delay the start of a programme by between 30 minutes (30') and a maximum of 20 hours (20h).

1. Select the programme and additional functions if necessary.
2. Press the DELAY START button (6) as many times as necessary until the required start delay appears on the display, e.g. 12h if the programme is to be started in 12 hours.

If the display is showing 20h and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.

3. To activate the delay timer, press the START PAUSE button (5). The amount of time remaining until the programme is set to start is continuously displayed (e.g. 15h, 14h, 13h, ... 30' etc).

   The delay time icon is on.

Child lock

The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed. The child lock function locks all buttons and the programme knob. The child lock can be activated or deactivated by holding down the BUZZER (3) and TIME (4) buttons simultaneously for 5 seconds.

- Before programme is started: Appliance cannot be used
- After programme is started: Programme in operation cannot be changed

The icon appears in the display to indicate that the child safety device is activated.
The child safety device is not deactivated once the programme comes to an end.
If you want to set a new programme, you must first deactivate the child safety device.

Starting the programme

Press the START PAUSE button (5). The LED above stops flashing, becomes steady. The programme is started. Display shows elapsing cycle time or delay time if activated.

Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.

The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option (excluding the *buzzer*) is set, *Err* appears in the multidisplay. The drying programme is not however affected by this (laundry protection).

Drying cycle complete / removing laundry

Once the drying cycle is complete, display shows a blinking . If the BUZZER button has been pressed, an acoustic signal sounds intermittently for about one minute.

The drying cycles are automatically followed by an anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.) If *long anti-crease* function has been selected, the anti-crease phase is lengthened by 60 minutes.

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Care and cleaning" chapter.)
3. Remove laundry.
4. Turn the programme selector to OFF.

After each drying cycle:

- Clean the micro-fine filter and fine filter
- Drain the condensed water container

(See chapter "Care and cleaning".)

5. Close the door.

Care and cleaning

Cleaning fluff filter

The filters collect all the fluff which accumulates during drying. To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.
The warning led is on to remind you this operation.

CAUTION!
Never operate the dryer without fluff filters or with damaged or blocked fluff filters.

1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

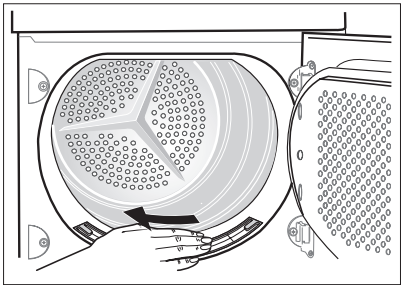

3. After a period of time, a patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter from the door pulling it out. It can be positioned with the tooth facing to the left or to the right).

   After cleaning do not forget to put it back.

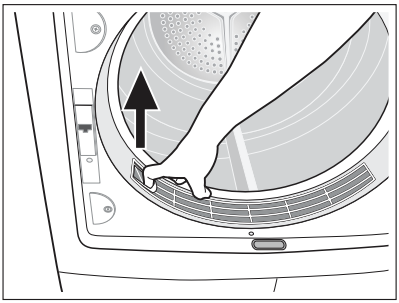

4. Push down unlock button on large mesh filter.

   Large mesh filter jumps up.

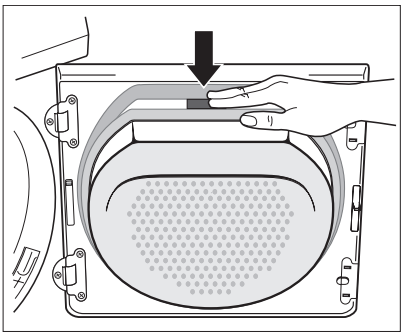

5. Take out fine strainer.
6. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

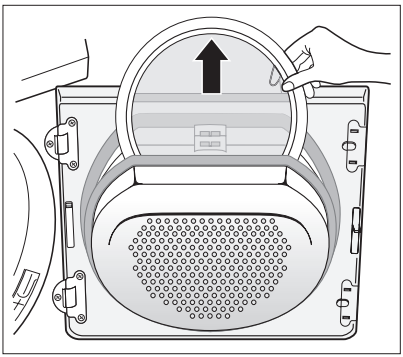

Clean the entire filter area

The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

7. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.

8. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
9. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
10. Re-insert fine strainer.
11. Press against the large mesh filter until it locks into the interlock.

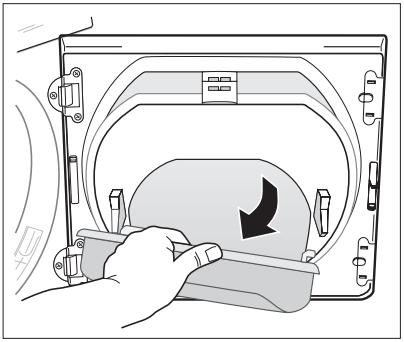

If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

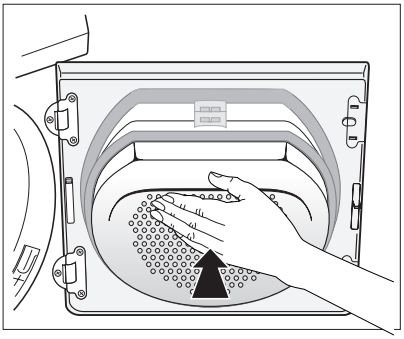

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the condensate tank

Empty condensate tank after every drying cycle.
If the condensate tank is full, an active programme will break off automatically and the warning led light up. In order to continue the programme, the condensate tank must first be emptied.

WARNING!
The condensate is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer containing condensed water container completely **1** and pull up the condensed water container's drainage pipe as far as it will go **2** .

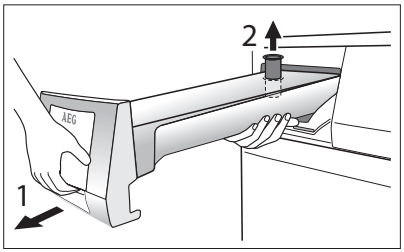

2. Pour condensed water out into a basin or similar receptacle.
3. Slide outlet connections in and refit condensate tank.

   If the programme has been interrupted as a result of the condensate tank being full: Press the START PAUSE button to continue the drying cycle.

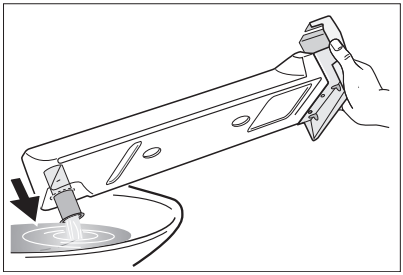

The condensate tank has a volume of approx. 4 litres. This is sufficient for around 7 kg of laundry which has previously been spun at 1000 revolutions/ minute.

The condensate can be used as distilled water, e.g. for steam ironing. However first filter the condensate (e.g. with a coffee filter) to remove any residue and small pieces of fluff.

Cleaning heat exchanger

If the warning led is lighting, the heat exchanger needs to be cleaned.

CAUTION!
Operating when the heat exchanger is blocked with fluff can damage the dryer. This also increases energy consumption.

1. Open door.
2. Open door in plinth. To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.
3. Clean fluff from the inside of the door and the heat exchanger front chamber. Wipe the door seal with a damp cloth.

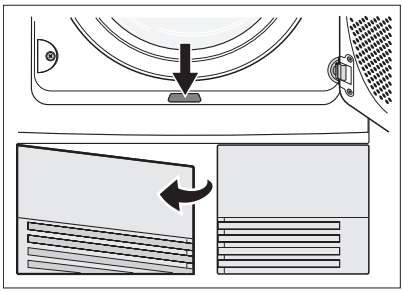

4. Turn both lock washers inwards.

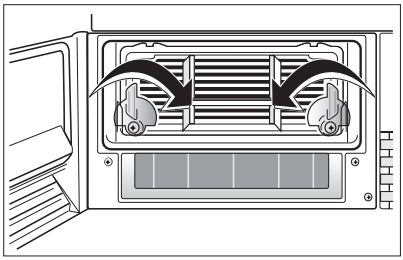

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

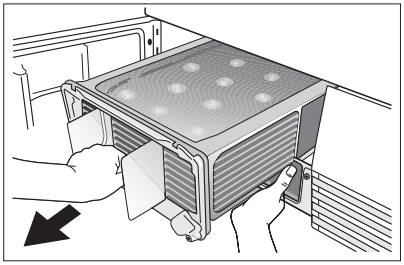

CAUTION!
Do not use sharp objects to clean. The heat exchanger could develop leaks.

7. Clean heat exchanger.

   It is best to use a brush or to rinse thoroughly with a hand-held shower.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close door in plinth.

CAUTION!
Never operate the dryer without the heat exchanger.

Cleaning the drum

CAUTION!
Do not use abrasives or steel wool to clean the drum.

Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.
Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean operating screen and housing

CAUTION!
Do not use furniture cleaners or aggressive cleaning agents to clean the machine.
Use a damp cloth to wipe down the operating screen and housing.

What to do if ...

Troubleshooting by yourself

Problem [1]	Possible cause	Remedy
Dryer does not work.	Dryer not connected to mains supply.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door opened.	Close loading door
	The START PAUSE button not pressed.	Press the START PAUSE button.
Unsatisfactory drying results.	Incorrect programme set.	Set suitable programme. [2]
	Fluff filters clogged.	Clean fluff filters. [3]

	Heat exchanger clogged.	Clean heat exchanger. [3]
	Max. loading exceeded.	Respect max. loading volume.
	Covered ventilation grill.	Uncover ventilation grill in base area.
	Residue inside the drum.	Clean the drum inside.
	High water hardness.	Set suitable water hardness[4].
Loading door does not close	Filters not locked in place.	Install fine filter and/or snap course filter into place.
Err (*Error*) on the LCD.[5]	Attempt to change parameters after start of the programme.	Turn the dryer off and on. Set requested parameters.
No drum light	Programme selector in OFF position.	Turn it to DRUM LIGHT (if available) or to any programme.
	Defective light bulb.	Replace light bulb (see next section).
Abnormally elapsing time on the LCD[5]	Time to end is calculated on the basis of: type, volume and dampness of laundry.	Automatic process; this is not a machine fault.
Programme inactive	Full water reservoir.	Empty water reservoir[3] , press START PAUSE button.
Drying cycle to short	Small laundry volume./Too dry laundry for selected programme.	Select time programme or higher drying level (e.g. EXTRA DRY).
Drying cycle to long [6]	Fluff filters clogged.	Clean fluff filters.
	To high loading volume.	Respect max. loading volume.
	Laundry insufficiently spun.	Spun adequately the laundry.
	Particularly high room temperature - no machine fault.	Lower the room temperature if possible.

1) In case of error message on the LCD (e.g. ***E51*** - only dryers with the LCD): Switch the dryer off and on. Set programme. Press the START PAUSE button. Does not work? - inform local service and quote the error code.
2) follow program recommendation - see *Programme overview* chapter
3) see *Care and cleaning* chapter
4) see *Machine settings* chapter
5) only dryers with the LCD
6) Note: After around 5 hours the drying cycle ends automatically (see *Drying cycle complete* section).

Changing the bulb for interior lighting

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local service centre.

When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.

WARNING!
Do not use standard bulbs! These develop too much heat and may damage the machine! Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw cover back down.

Check the correct positioning of o-ring gasket before screwing back the door light cover. Do not operate the dryer when missing o-ring gasket on door light cover.

WARNING!
For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

Machine settings

Setting	Implementation
Buzzer permanent on/off	1. Turn the programme selector to any programme. 2. Press simultaneously the DELICATE and LONG ANTI-CREASE buttons and hold down for approx. 5 seconds. – diode above BUZZER button starts lighting - buzzer permanently on. – lighting diode comes off - buzzer permanently off. 3. The buzzer is by default always off. You can use the BUZZER button to activate or deactivate sound but the machine does not memorize your selection.
Water hardness [1]	1. Turn the programme selector to any programme. 2. Press simultaneously the DELICATE and TIME buttons and hold down for approx. 5 seconds. The current setting is on the display: – C0_ low conductivity <300 µS/cm – C0= medium conductivity 300-600 µS/cm – C0≡ high conductivity >600 µS/cm 3. Press the START PAUSE button sequentially until you set desired level. 4. To memorize setting press simultaneously the DELICATE and TIME buttons or turn knob to OFF position
Emptying water reservoir - warning LED off [2]	1. Turn the programme selector to any programme. 2. Press simultaneously the LONG ANTI-CREASE and TIME buttons and hold down for approx. 5 seconds. The current setting is on the display: – warning icon and __0 - warning message is off – warning icon and __1 - warning message is switched on

1) *Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.*

2) *By default the warning LED is always on at the end of the drying cycle or during the cycle if the water reservoir is full. When using an external drain for the condensed water warning can be offi*

Technical data

CE

Parameter	Value
Height x width x depth	85 x 60 x 58 cm
Drum volume	108 l
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 40 kg
Loading volume (depends on programme)[1]	max. **7** kg
Voltage / Frequency	230-240 V / 60Hz
Required fuse	13 A
Total power	2500 W
Energy efficiency class	**C**
Energy consumption (7 kg of cotton, pre-drained at 1000 rpm) [2]	**4.4** kWh
Average annual energy consumption	298.7 kWh
Use	Domestic
Permissible ambient temperature	+ 5°C to + 35°C

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Energy consumption in kWh / average drying time in min.
COTTON CUPBOARD DRY[3]	**4.4 / 130** *(7 kg load pre-drained at 1000 rpm)* 4,2 *(7 kg load pre-drained at 1200 rpm)* 3,9 *(7 kg load pre-drained at 1400 rpm)* 3,4 *(7 kg load pre-drained at 1800 rpm)*
COTTON IRON DRY[3]	**3.41 / 100** *(7 kg load pre-drained at 1000 rpm)*
SYNTHETICS CUPBOARD DRY[3]	**1.36 / 48** *(3 kg load pre-drained at 1200 rpm)*

1) Different loading volume data may be needed in some countries as a result of different measuring methods.
2) in accordance with EN 61121
3) Hints for test institutes: cycle has to be checked in accordance with EN 61121

Installation

Appliance positioning

- It is recommended that, for your convenience, the machine is positioned close to your washing machine.
- The tumble dryer must be installed in a clean place, where dirt does not build up.
- Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.
- To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.
- Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.
- The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.

- The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.
- When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.
- Should the appliance be moved, it must be transported vertically.
- The appliance must not be installed behind the lockable door, a sliding door a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the dryer is restricted.

Removing transport safety packaging

CAUTION!
Before use all parts of the transport packaging must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

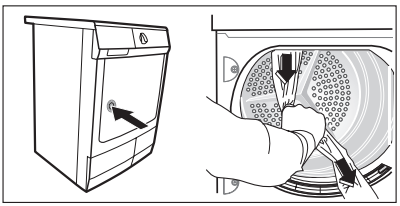

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Product description" chapter).
Connect the machine to an earthed socket, in accordance with current wiring regulations.

WARNING!
The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions.
Should the appliance power supply cable need to be replaced, this must be carried out by our Service Center.

WARNING!
The plug must be accessible after installing the machine.

Changing door stop

WARNING!
Before changing the door stop, disconnect the mains plug.

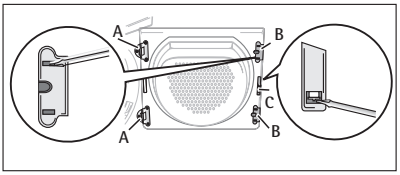

1. Open loading door.
2. Unscrew hinge **A** from the front of the machine and take off the loading door.
3. Remove cover plates **B** . To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Use an appropriate tool and exert pressure to unfasten locking block **C** from the snap-on fixture, take out and re-insert on the other side having rotated the block through 180°.
5. Unscrew hinge **A** from the loading door, rotate through 180°, re-insert on the opposite side and screw down.
6. Re-insert cover plates **B** on the opposite site having first rotated them through 180°.

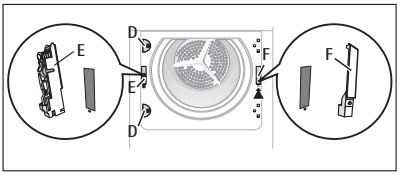

7. Unscrew cover plates **D** from the front of the machine, rotate through 180°, screw on the opposite side.
8. Unscrew door lock **E** , push down slightly and remove from the front of the machine.
9. Press snap-in button **F** in and down, press cover down slightly and remove from front of the machine.
10. Change door lock **E** over to the opposite side, screw down the door interlock.
11. On the other side, insert cover **F** and allow snap-in button to lock into place.
12. Insert loading door and hinges into recesses on the front of the machine and screw down.

Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

- **stacking kit**

Available from your Service Force Centre or your specialist dealer

These intermediate installation kits can be used to arrange the dryer and a washing machine (60 cm wide, front loaded) as a space-saving washer/dryer stack. The washing machine is at the bottom and the dryer is at the top.

Read carefully the instructions supplied with the kit.

- **draining kit**

Available from your Service Force Centre or your specialist dealer

Installation kit for direct draining of the condensed water into a basin, siphon, gully, etc. The water reservoir then no longer has to be drained, it must however remain in its intended position in the machine.

Read carefully the instructions supplied with the kit.

- **pedestal with the drawer**

Available from your Service Force Centre or your specialist dealer

To situate the dryer in optimal high and have some additional space to store (e.g. laundry).

Read carefully the instructions supplied with the kit.

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions - see chapter *What to do if....*
If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.
In order to be able to assist you quickly, we require the following information:
– Model description
– Product number (PNC)
– Serial number (S No. is on rating plate stuck to the product - to find it see chapter *Product description*))
– Type of fault
– Any error messages displayed by the appliance
So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:	.....
PNC:	.....
S No:	.....

Guarantee/Customer Service Centres

EURO-LINE APPLIANCES

LENGTH OF WARRANTY	EURO-LINE WILL PAY FOR:
TWO YEAR FULL WARRANTY from original date of purchase, including parts and labour, to the first purchaser of this appliance	Replacement parts and/or labour to repair defects in materials or workmanship. Service must be provided by an authorized Euro-Line company (unless advised otherwise).

THIS GUARANTEE DOES NOT COVER COMMERCIAL USE.

The name Euro-Line Appliances, for service matters, incorporates work performed by authorized service agents or service companies.

EXCEPTIONS:

EURO-LINE APPLIANCES WILL NOT PAY FOR THE FOLLOWING SERVICE CALLS:

1. To install or correct the installation of an appliance
2. To instruct the use of an appliance.
3. To replace house fuses, re-set circuit breakers or correct house wiring.
4. To correct house plumbing.
5. To clean drains, filters or garbage disposers.
6. To repair an appliance if it fails due to misuse or abuse.

EURO-LINE APPLIANCES WILL NOT PAY WHEN THE FOLLOWING OCCURS:

1. Damage resulting from fires, acts of God, alteration, improper installation, or installation not in accordance with local building codes.
2. Pickup or delivery of major appliances requiring service. The appliances are designed to be repaired in the home. However, Euro-Line will not be responsible for travelling and labour costs if the customer lives in excess of 50 km/30 miles, or if the travel time is in excess of 30 minutes from the nearest service center. Any excess to this will not be covered by the warranty.

In no event, will Euro-Line be responsible for incidental or consequential damages. For warranty service and parts, contact **EURO-PARTS**. Service will be provided during normal business hours. Should you have a service problem that is not resolved locally, contact:

For Service and Parts Contact:

EURO-PARTS, USA	EURO-PARTS, CANADA	EURO-LINE APPLIANCES
Tel: 1-800-561-4614 Fax: 1-519-528-5001	Tel: 1-800-678-8352 Fax: 1-519-528 5001	1-800-421-6332 Tel. Direct: 1-905-829-3980 Fax: 1-905-829-3985

User Instructions & Installation Manual

Service & Repair

To save you time and money please have the following information ready in case you have to call for service:

- Name of the dealer from whom you purchased the appliance.
- Model number (shown on the rating plate)
- Serial number (shown on the rating plate)
- Date of purchase.

You should also retain the original purchase receipt to support any claim made under the warranty. (We suggest you staple the receipt to this page).

If service is required, contact the Service Center:	
EURO-PARTS, CANADA	EURO-PARTS, USA
Tel: 1 800 678 8352 Fax: 1-519-528-500	Tel: 1-800-561-4614 Fax: 1-519-528-5001

DISTRIBUTED BY: EURO-LINE APPLIANCES 2278 SPEERS ROAD OAKVILLE, ONTARIO CANADA L6L 2X8 1-800-421-6332 Tel: 905-829-3980 Fax: 905-829-3985 www.euro-line-appliances.com